


DATASHEET

[WWW.PREVENT-SYSTEMS.COM](http://WWW.PREVENT-SYSTEMS.COM)

**Prev5exp**  
AUTOMATIC LOW PRESSURE  
WATER MIST NOZZLE

# PREVENT SYSTEMS

## WHEN SAFETY IS TAKEN SERIOUSLY

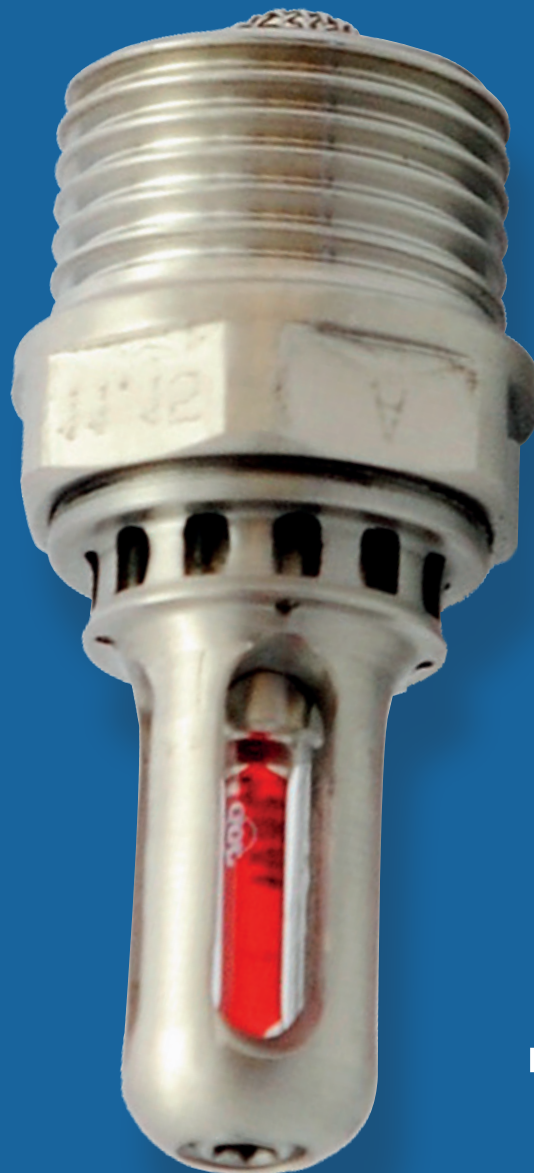


# Prev5exp

## AUTOMATIC LOW PRESSURE WATER MIST NOZZLE

### Part 1

#### General description

The Prevent Systems low-pressure water mist nozzle Prev5exp with fast response thermally actuated bulb, is approved by the Loss Prevention Certification Board (LPCB), and listed in the “Red Book”, which can be viewed at RedBookLive.com.

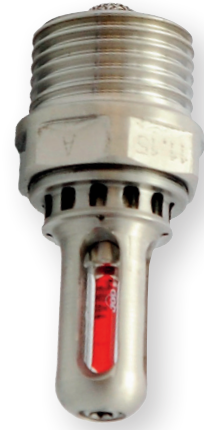

#### Technical Data

<b>Approvals</b>	LPCB
<b>Minimum operating pressure</b>	2.4 bar
<b>Maximum operating pressure</b>	16 bar
<b>Maximum standby pressure*</b>	12 bar
<b>K-factor</b>	30
<b>Minimum flow rate</b>	46.5 lpm
<b>Nozzle material</b>	Stainless steel 304
<b>Thread size</b>	1/2" BSP or NPT
<b>Strainer</b>	0.24mm Stainless steel
<b>Thermally actuated bulb</b>	Fast response 3 x 16, RTI 36 (ms) <sup>1/2</sup>
<b>Release temperature</b>	57°C, 68°C, 79°C, 93°C, 141°C
<b>Nozzle position</b>	Pendant
<b>Nozzle size</b>	Total length = 52mm, max. diameter = 24mm
<b>SIN</b>	Prev5exp

\*The jockey-pump shall be set to maintain the standby pressure in the system, up to a maximum of 12 bar.

#### Installation

The nozzles shall be handled carefully before, -under and -after installation. Nozzles that are damaged in any way, shall be replaced. Follow these installation steps:

- The temperature bulb shall be checked for damage prior to installing the nozzle into the nozzle fitting. A small air bubble in the temperature bulb shall easily slide back and forth when tilting the nozzle. There shall be no loss of liquid or cracks in the bulb.
- Slide the cover plate onto the nozzle, where applicable.
- Apply pipe thread or sealant to the nozzle threading before hand-tightening it into the nozzle fitting.
- Use an extended 23 mm socket wrench and carefully tighten the nozzle.

#### Operation

During a fire, the fluid in the fast response thermally actuated glass bulb will expand and shatter. The nozzle valve would then drop down, allowing the water to flow through the nozzle and suppress or extinguish the fire.

#### Maintenance

The nozzles shall be handled carefully before, -under and -after installation. Nozzles that are damaged in any way, shall be replaced. The nozzles shall not be painted, coated or otherwise altered after leaving the factory.

# Prev5exp

## AUTOMATIC LOW PRESSURE WATER MIST NOZZLE

### Part 1

#### Notes

For a full description, please refer to the Design, Installation, Operation and Maintenance manual (DIOM). A full training course is offered for the appropriate design, installation, operation and maintenance of Prevent Systems low-pressure water mist automatic fire suppression systems.

Prevent Systems water mist nozzles are produced and tested to stringent in-house quality standards according to ISO 9001.



# Prev5exp

## AUTOMATIC LOW PRESSURE WATER MIST NOZZLE

### Part 2

The Prev5exp is designed and successfully tested for fixed water mist fire protection systems for use in commercial low hazard occupancies within buildings, according to EN 14972-7 and BS 8489 Part 7, Category 3. This would include protection of areas such as offices, schools, classrooms, seating areas and entrance foyers, and common rooms in care institutions, hospitals, hotels etc. not covered as residential or domestic areas.

#### Design

Each system shall be hydraulically designed according to the minimum water flows and water pressure, as specified in the Technical Data section, and the maximum allowable coverage area for the nozzles, as described below. The system shall meet the design requirements specified by the Authorities Having Jurisdiction (AHJ).

<b>Application</b>	Commercial low hazard occupancies
<b>Max coverage area</b>	4m x 4m = 16 m <sup>2</sup>
<b>Spacing between nozzles*</b>	Maximum 4m, minimum 2m
<b>Distance to wall*</b>	Maximum 2m, minimum 0.1m
<b>Distance to ceiling</b>	0 – 150mm
<b>Maximum ceiling height**</b>	5m
<b>Piping (non-corrosive)</b>	Stainless steel, PrevPex, RedPipe, CPVC, subject to approval in each case.
<b>Fire test standard</b>	EN 14972-7 and BS 8489 Part 7, Category 3

\*The maximum spacing between nozzles is 4m and up to 2m from the wall at ceiling heights between 3m and 5m. Maximum spacing between nozzles at ceiling heights below 3m is 3.5m, and up to 1.75m from the wall.

In Residential, and commercial low hazard rooms smaller than 40m<sup>2</sup>, the maximum distance in one direction can be exceeded by up to 20 % if the other direction is reduced correspondingly, so that the maximum coverage area for the nozzle is not exceeded.

\*\*The Prev5exp nozzle can be installed up to a 5m ceiling height. Ceiling heights exceeding 5m are subject to approval in each case.

Section 5 of the DIOM describes in detail the design requirements and limitations, nozzle spacing, positioning with respect to obstacles, ceiling slopes, etc. Section 6 covers hydraulic calculations.



## LIMITED WARRANTY

### 5-YEAR LIMITED PRODUCT WARRANTY ON PREVENT SYSTEMS LOW PRESSURE WATER MIST NOZZLES

#### **The warranty shall cover:**

This warranty applies to the full extent permitted by law. The warranty applies to the original buyer for 5 years from date of purchase against defects in material or production workmanship, and only if the nozzles are paid for in full, installed and maintained pursuant to Prevent Systems directions for installation and maintenance.

Nozzles found to be defective shall be repaired or replaced by Prevent Systems. Prevent Systems will not cover any costs or obligations in connection with the sale, repair, or replacement without prior written agreement.

The warranty rights shall follow the building and shall apply to the person who can document that he/she owns the building.

#### **The warranty does not cover:**

The warranty does not cover incorrect handling, storage, design or installation of the water mist nozzles. Prevent Systems shall not be liable for any indirect or consequential damages, including labor charges, and the liability shall not exceed the amount of the sales price.

#### **Notification of claim:**

Notification of claims which falls under this warranty shall be reported to Prevent Systems in writing without delay, so that immediate action to remedy the issue can be taken.

The rights of this warranty is a supplement to the additional rights of the buyer on the basis of the legislation.

#### **Contact:**

For further information or for signing up for a training course, please contact us at [post@prevent-systems.no](mailto:post@prevent-systems.no) or via our web-site [www.prevent-systems.com](http://www.prevent-systems.com).

Prevent Systems AS  
Fåberggaten 126  
N-2615, Lillehammer  
Norway